


ASPENSTONE

Product Selection Guide

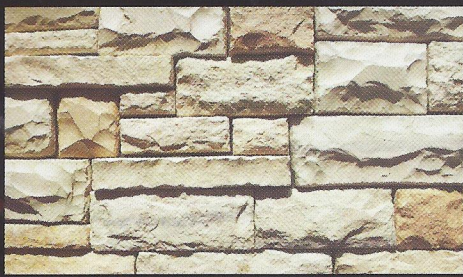

WWW.ASPENSTONE.US



Ohio Gray Cobblestone #101




Arizona Valley Cobblestone #102



Colorado Mountain Cobblestone #103



Austin Limestone #201

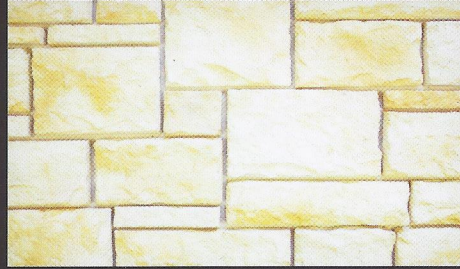

Texas Cream Limestone #202




Austin White Limestone #203



Aspen Ledgerstone #501



Sedona Blend Ledgerstone #507

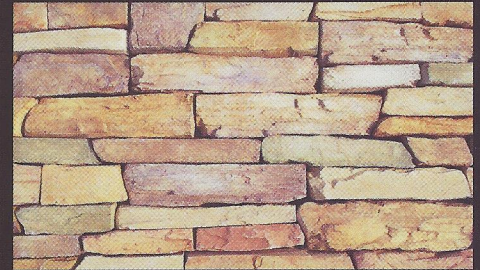


Caramel Ledgerstone #503



Austin Profit Ledgerstone #601



Arizona Profit Ledgerstone #602

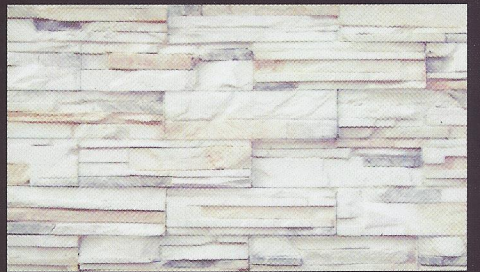

White Oak Profit Ledgerstone #603




Austin Fieldstone #701



Canyon Fieldstone #702



Sand Valley Fieldstone #703

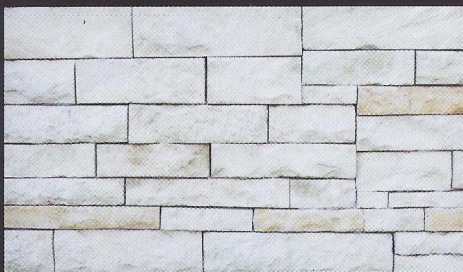

Austin Stackstone #401



Earth Gray Stackstone #402




Santa Fe Stackstone #403



Southern Cream Cobblestone #104



Chardonnay Valley Cobblestone #105

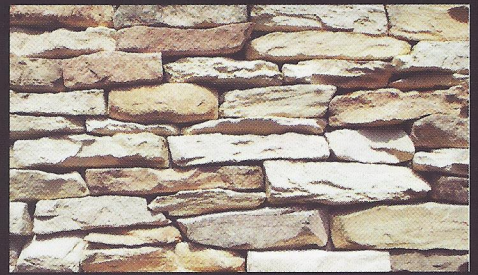

Aspen Hill Country Ledgestone #801



Buckskin Blend Limestone #204



Tuscan Valley Limestone #205



Texas Lueder Limestone #206



Chardonnay Ledgestone #504




Oklahoma Gray Ledgestone #505



Sunset Canyon Ledgestone #506



Earth Gray Profit Ledgestone #604

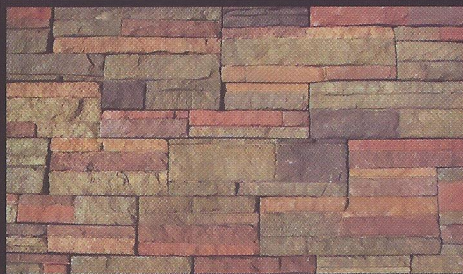

Chardonnay Profit Ledgestone #605



Virginia Profit Ledgestone #606



Chardonnay Fieldstone #704



Gray Blend Fieldstone #705



Deer Valley Fieldstone #706



Chardonnay Stackstone #404



Bucks Country Stackstone #405



Idaho West Stackstone #406




Chardonnay Milano Country Ledgestone #802



Rustic Canyon Country Ledgestone #803



Pennsylvania Country Ledgestone #804

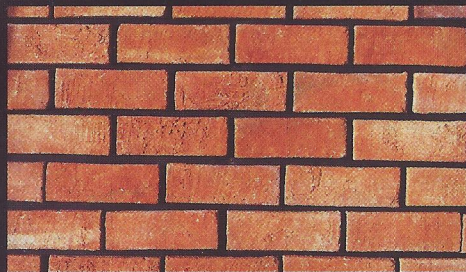

Dusty Rose Thin Brick #901



Dark Buff Thin Brick #902




Chardonnay Thin Brick #903




Chicago Used Brick #905



Cider Bayou Used Brick #906

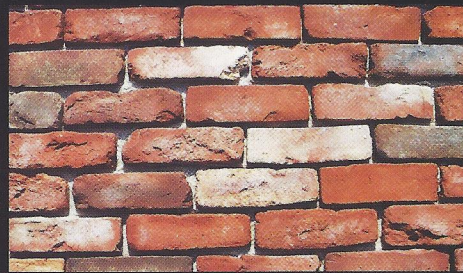

Old Antique Red Used Brick #907

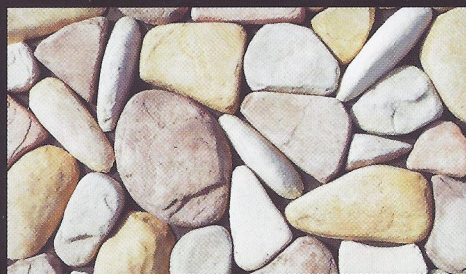

Aspen River Rock #301



Canyon River Rock #302



Caramel River Rock #303



Austin Lake Castlerock #805



Tuscany Blend Castlerock #806



Smoky Mountain Castlerock #807




Wister Oklahoma Stackstone #407

WHY CHOOSE ASPENSTONE?


- High Quality
- Engineered to meet or excel all specifications for a consistent appearance, base colors run throughout our stones
- Immediate Availability
- Less expensive & Easy Installation
- Wide Variety of Style & Colors

HEARTH STONE


WATERTABLES/SILLS

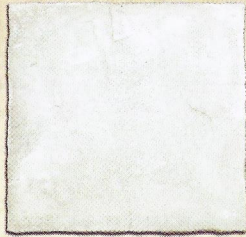


AUSTIN
1101 A
20x20x1^{3/4}

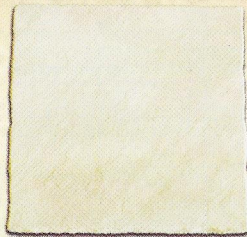


TAN
#1101 T
20x20x1^{3/4}

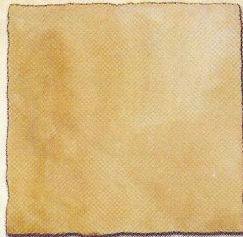


BUFF
#1101 B
20x20x1^{3/4}

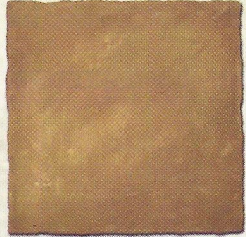


CHOCOLATE
#1101 C
20x20x1^{3/4}

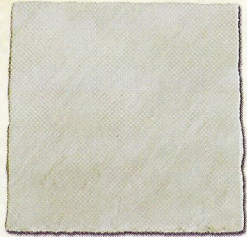

GRAY
#1101 G
20x20x1^{3/4}

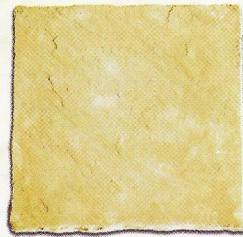

LIGHT GREEN
#1101 GR
20x20x1^{3/4}

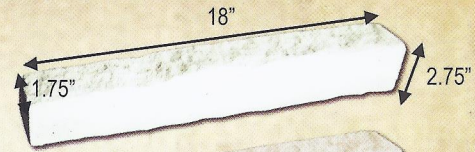

AUSTIN
#1102A



TAN
#1102T



BUFF
#1102B



CHOCOLATE
#1102C




GRAY
#1102G



LIGHT GREEN
#1102GR

QUOIN

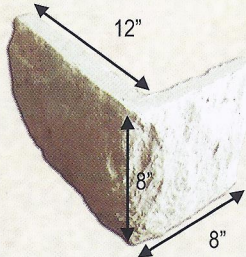


AUSTIN
1103 A



TAN
#1103 T




BUFF
#1103 B

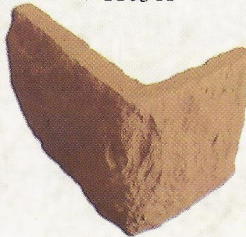


CHOCOLATE
#1103 C




GRAY
#1103 G

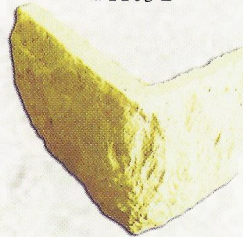

LIGHT GREEN
#1103 GR

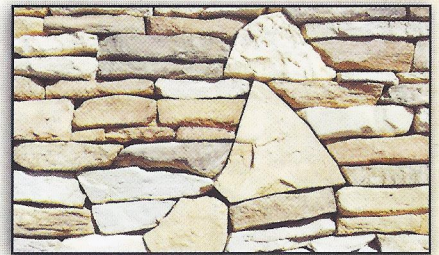


ASPEN HILL COUNTRY MIX # 91

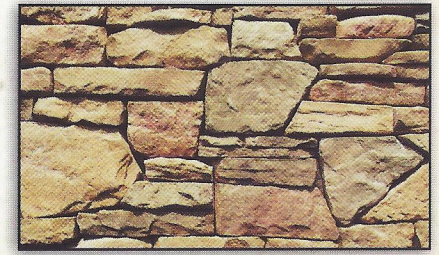

CHARDONNAY COUNTRY MIX # 92

KEYSTONE

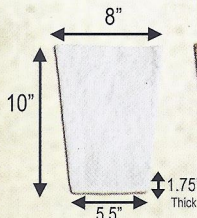

AUSTIN
1104 A



TAN
#1104 T



BUFF
#1104 B




CHOCOLATE
#1104 C



GRAY
#1104 G




LIGHT GREEN
#1104 GR

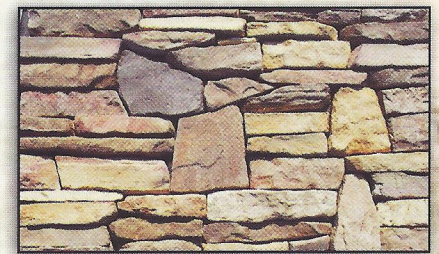

CANYON COUNTRY MIX # 93


WINDOW TRIM

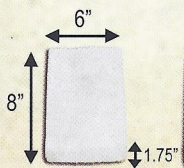


AUSTIN
1105 A



TAN
#1105 T



BUFF
#1105 B



CHOCOLATE
#1105 C




GRAY
#1105 G




LIGHT GREEN
#1105 GR


DISTRIBUTED BY:

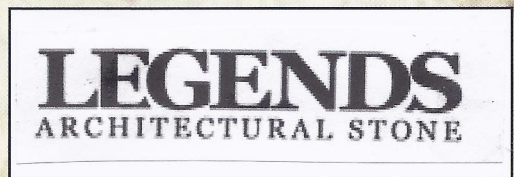

ACCESSORIES AND MORE...

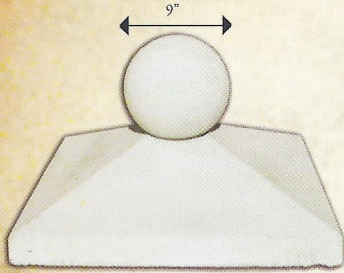


26.5" x 26.5" x 3.5"
SMOOTH FINISH
CSP #1001

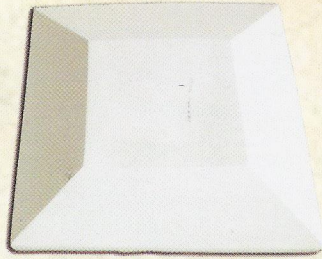

26.5" x 26.5" x 3.5"
SMOOTH FINISH
CSP #1002



24" x 24" x 3"
STONE FINISH
CSP #1003

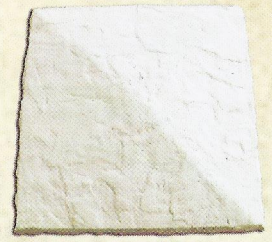

19" x 19" x 3 1/2"
STONE FINISH PEAKED
CSP #1004




24" x 24" x 3.5"
STONE FINISH PEAKED
CSP #1010




18" x 18" x 3.5"
STONE FINISH PEAKED
CSP #1005




15" x 15" x 3 1/2"
STONE FINISHED PEAKED
CSP #1006

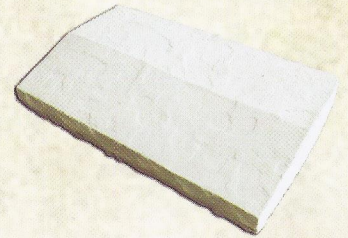


12" x 20" x 2 1/2"
STONE FINISH
CSP #1007

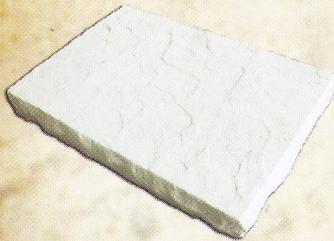


13" x 20" x 2.5"
STONE FINISH
CSP #1008

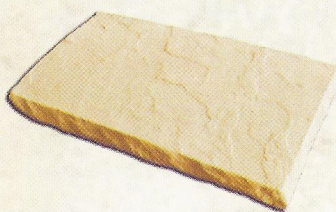

10" x 20" x 2.5"
STONE FINISH
CSP #1009

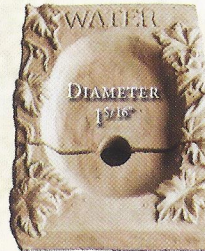

6" x 8" x 1.5 1/2"
DECORATIVE WATER
HYDRANT BLOCK
#81

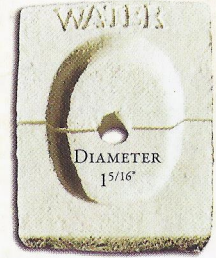

6" x 8" x 1.5 1/2"
BASIC WATER
HYDRANT BLOCK
#82

INSTALLATION INSTRUCTIONS

Step 1: Prepare the Surface

- A. Apply exterior surfaces with a moisture barrier starting from the bottom upward, and put on a 3.4 diamond wire lath for the surfaces' interior and exterior
- B. The lath should be hung horizontally. The lath should be lapped over 2" on the vertical and 6" on the horizontal seams. Then, wrap the lath around the corners.

Step 2: Mixing the Cement

- A. Scratch coat: 1 part Portland Cement, 2.5 parts sand.
- B. Mortar: 1 part Portland, 2 parts sand.
- C. Grout: 1 part Mason's cement to 2 parts sand.

Dry mix sand and cement together in a wheelbarrow or mud box. Continue mixing and add water slowly until you get a more pasty substance

Step 3: Scratch Coat


- A. After the cement mix, use a masonry towel to apply an even layer over the entire wire lath, including the holes. Use a brush to roughen the scratch coat a little. Allow 24 hours for drying.

Step 4: Apply Stone

- A. Put in the corners first and begin from the top working down. Apply 1/2 inch mortar layer to the stone's back side, place it against the wall, and shake gently into place.
- B. Cut stone with power saw.
- A. Cut a half inch hole in the grout bag's tip. Fill the bag with cement half full and twist it's top. Squeeze some back into bucket to rid air pockets.
- B. Squeeze grout in the stone, then let it dry. Make sure it is firm, but not very hard. Take and use a stick to wipe around the stone. Lastly, remove sand with a brush.



5" x 7" x 1 1/2"
ELECTRICAL BLOCK
#83

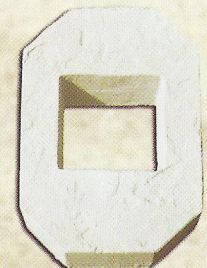

11.25" x 7.5" x 1.75"
4.25" x 4.25" OPENING
OCTAGONAL LIGHT
FIXTURE
#84

ALL PRODUCTS IN THIS BROCHURE MADE BY COLORSTONE MFG

TOLL FREE 1-877-478-6639